

Slide 1

PepperGun Maintenance

Leo Nikles

**NO LICENSE
REQUIRED**

www.pepperammo.com

1

Slide 2

Welcome to our world!

- n This guide will help you service your PepperGun should the need arise.
- n We have included pictures and explanations on maintenance with "tips & tricks"
- n IT IS ADVISEABLE TO ONLY PUNCTURE THE CO2 GAS IMMEDIATELY BEFORE USE !


www.pepperammo.com

2

Slide 3

Trouble shooting

- n 1) Gas leaking from bottom of barrel.




www.pepperammo.com

3

Slide 4

Follow the easy steps


- n Use hex tool and loosen hex screw
- n Use small screwdriver to move cylinder forward and out of chassis.

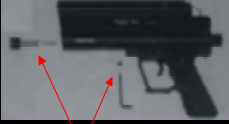

www.pepperammo.com 4

Slide 5


- n On the cylinder you will find a black and a white "o" ring.
- n Replace white o-ring with a white o-ring. Replace the black o-ring with a black o-ring.
- n Use a empty co2 cannister to push cylinder back into position.
- n Tighten hex screw.



www.pepperammo.com 5

Slide 6


Gas leaking from barrel.




- n Remove cylinder as previously described.
- n Loosen grip with two hex screws (below)

www.pepperammo.com 6

Slide 7




- n (1) Remove split pin and silver pin.
- n (2) Hold parts with hand, preventing the spring "jumping" out



www.pepperammo.com 7

Slide 8




- n (3) Remove hammer and bolt by sliding it out.
- n (4) Remove brass screw, under the grip on the underside of the gun


www.pepperammo.com 8

Slide 9

- n (5) Use screwdriver to push 2nd cylinder out the front of the gun.




- n Replace similar o-rings with each other on 2nd cylinder.



www.pepperammo.com 9

Slide 10

- n Refit all parts in reverse sequence.




- n Insert co2 gas and test.

www.pepperammo.com 10

Slide 11

Other Tips...

- n If magazine is loose or seem mis-aligned during firing, remove (6) black cap and refit



www.pepperammo.com 11

